



2F FR 下手 舞台側→

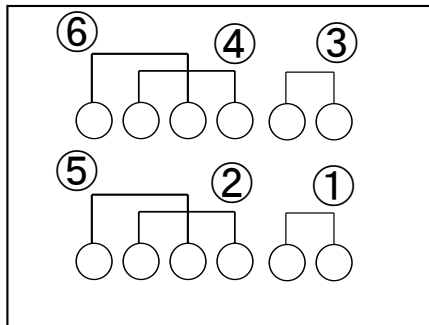


←舞台側 2F FR 上手

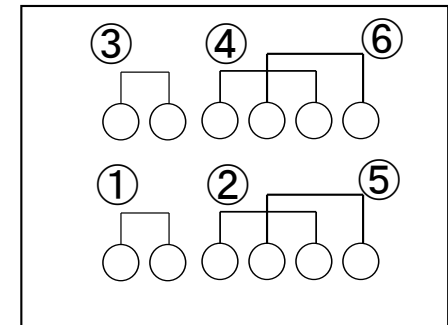

**FR 回路取り**  
 1F FS (上下共) ①・② / ③・④ / ⑤ / ⑥  
 2F FS (上下共) ①・② / ③・④ / ⑤・⑥

1F FR 下手

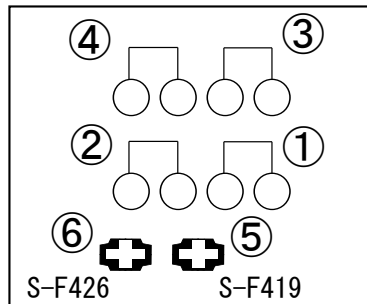

**CL 回路取り**  
 上段 ⑨・⑩・⑪・⑫ / ⑬・⑭・⑮・⑯  
 下段 ①・②・③・④ / ⑤・⑥・⑦・⑧  
 脇上下 ⑰・⑱・⑲・⑳ / ㉑・㉒・㉓・㉔  
 空き回路  
 ㉕・㉖・㉗・㉘ / C-30 × 2

1F FR 上手

